



# Professional Laying Clear Glass Mosaic

SICIS



**1** **NEUTRALIZE** with white adhesive the surface of baking where a transparent or coloured glass mosaic mesh mounted will be installed



**2** Start laying the white adhesive by **TROWEL WITHOUT TEETH** to create a white flatness backing



**3** Perfect white backing to start laying operations by spreading the white adhesive by trowel teeth 4 mm



**4** Start installing clear glass mosaic



**5** Pressing the glass mosaic by trowel




**6** Start grouting



**7** With correct grouting the empty holes and white fiber mesh are not visible



**8** Spread grouting

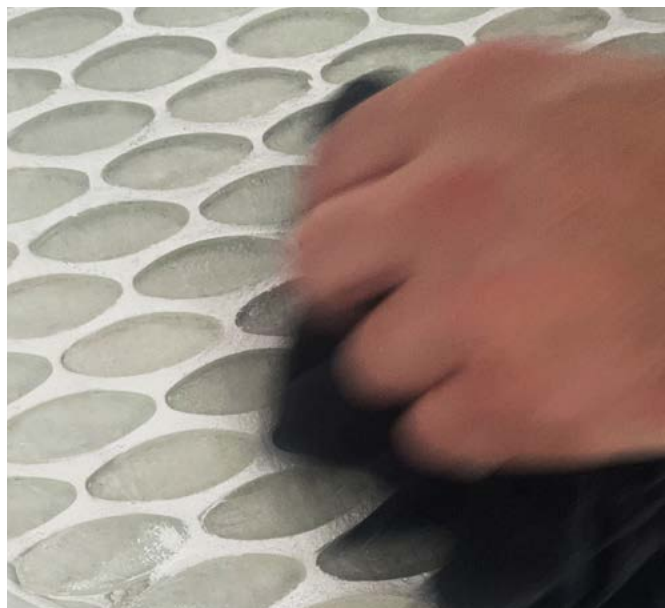

**9** Final cleaning



**10** Final correct look with no visible empty holes and no visible fiber mesh